


Installation Diagram for all versions of PropSava – Single Phase

Installation procedures for the PropSava – single phase, should always adhere and refer to the local building code regulations, relevant wiring safety standards and appropriate permissions.


On deciding the incoming and outgoing load specifications for cable sizing connections to the PropSava, please use the following loading values as minimum:

PropSava Description	Incoming Maximum Load (from Electric Meter) - Amps	Outgoing Maximum Load (to Fuse Box) - Amps
5 KVA – 230V	25 Amps	23 Amps
12 KVA – 230V	50 Amps	45 Amps
18 KVA – 230V	90 Amps	80 Amps
23 KVA – 230V	115 Amps	105 Amps
2 KVA – 120V	20 Amps	18 Amps
5 KVA – 120V	50 Amps	45 Amps
9 KVA – 120V	90 Amps	80 Amps
12 KVA – 120V	120 Amps	105 Amps

Wiring Diagram

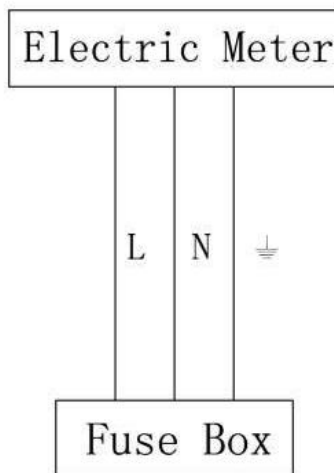

Original Connection

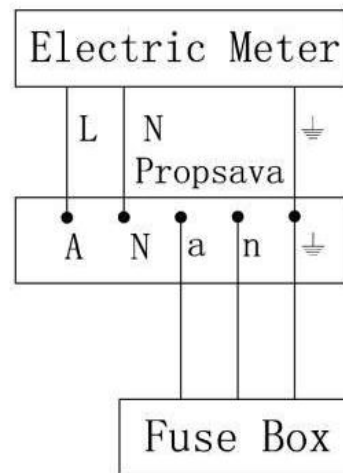

Connection with PropSava